

Installation Precautions:

- 1. Please read the instruction manual completely before installation.
- 2. The lighting system must be installed by qualified professional electricians and comply with national and local laws and regulations. To reduce the risk of fire, electric shock, and personal injury, the main power switch must be turned off before installing or modifying the system.
- 4. Please keep this manual for future maintenance reference.
- 5. Failure to install lighting fixtures according to the instructions will result in no quality assurance.
- 6. The external flexible cable or cord of this lamp cannot be replaced; If the flexible cable is damaged, the lamp should be scrapped.
- 7. The light source inside this lamp should be replaced by the manufacturer, its service agent, or someone with similar qualifications.


Installation accessories (random delivery):

Discharge hood

Quantity: 1


Installation steps and wiring:

- 1. Install the lamp onto the working surface with screws;
- 2. Connect each core wire of the lamp to the output wire of the power driver with an output voltage of 12V, and ensure that the wiring is properly connected Waterproof treatment, please refer to the model label and input prompt label on the lamp for details;
- 3. Lamp input: DC12V, 0.56A; The brownish red core wire is the "+" positive electrode, and the blue core wire is the "-" negative electrode;
- 4. The power on light is on.

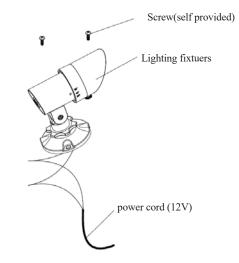

Lamp adjustment:

- 1. Tilt: Loosen the screw, adjust the lamp body to the appropriate position, and then tighten it;
- 2. Rotation: Loosen the nut, rotate the lamp body to the appropriate position, and then tighten it.

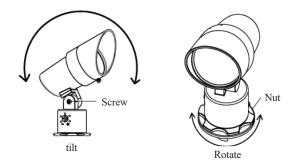

Licensed by "WAC" trademark holder - WAC LIGHTING, USA


Chinese Marketing Headquarters Address China factory Address WAC Lighting (Shanghai) Co, Ltd.
 : 14,Lane 299, Bi Sheng Road, Shanghai 201204,China
 : Manufactured WAC Lighting (Dongguan) Co, Ltd.
 : 390, Qingfeng Road, Qingxi Town, Dngguan, Guangdong. Postal code: 523653



Installation Instructions Model: EP2NI Flood light

Brightness adjustment:

- 1. Rotate the dimming knob until the arrow points to the corresponding scale or any position between the scales;
- 2. The higher the power, the brighter the lamp;

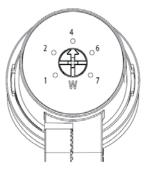


The values are for reference only


Light angle adjustment::

- 1. Remove the lampshade, grip the lamp body with your hand, rotate the lamp tube cover until the arrow points to the corresponding scale, or between the scales
- 2. Install the light mask (refer to the adjustment of the light mask for details);
- Note: There are 4 adjustable output angles.

Light hood adjustment::

- 1. Loosen the hand tightened screws;
- 2. Rotate the light mask to the appropriate anti glare position;
- 3. Tighten the hand tightened screws.

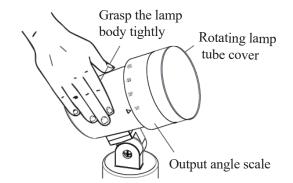

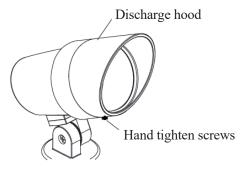



Product accessories:

• Ground plug - model: EP1NI-SPK-BK,

Provide optional installation methods.

Licensed by "WAC" trademark holder - WAC LIGHTING, USA Chinese Marketing Headquarters : WAC Lighting (Shanghai) Co, Ltd. Address : 14,Lane 299, Bi Sheng Road, Shanghai 201204,China China factory : Manufactured WAC Lighting (Dongguan) Co, Ltd. Address : 390, Qingfeng Road, Qingxi Town, Dngguan, Guangdong. Postal code: 523653

Installation Precautions:

Ά

- 1. Please read the instruction manual completely before installation.
- 2. The lighting system must be installed by qualified professional electricians and comply with national and local laws and regulations. To reduce the risk of fire, electric shock, and personal injury, the main power switch must be turned off before installing or modifying the system.
- 4. Please keep this manual for future maintenance reference.
- 5. Failure to install lighting fixtures according to the instructions will result in no quality assurance.
- 6. The external flexible cable or cord of this lamp cannot be replaced; If the flexible cable is damaged, the lamp should be scrapped.
- 7. The light source inside this lamp should be replaced by the manufacturer, its service agent, or someone with similar qualifications.

Installation accessories (random delivery):




Discharge hood

Quantity: 1


Installation steps and wiring:

- Install the lamp onto the working surface with screws (provided by oneself);
- 2. Connect the lighting fixtures to the mains;
- 3. The power on light is on.

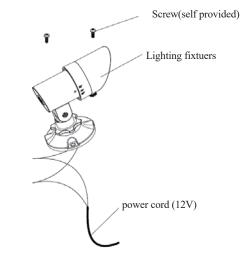

Lamp adjustment:

- 1. Tilt: Loosen the screw, adjust the lamp body to the appropriate position, and then tighten it;
- 2. Rotation: Loosen the nut, rotate the lamp body to the appropriate position, and then tighten it.

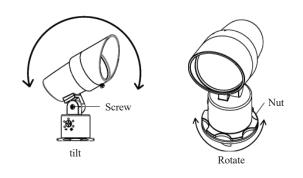

Licensed by "WAC" trademark holder - WAC LIGHTING, USA


Chinese Marketing Headquarters Address China factory Address WAC Lighting (Shanghai) Co, Ltd.
 WAC Lighting (Shanghai) Co, Ltd.
 14,Lane 299, Bi Sheng Road, Shanghai 201204,China
 Manufactured WAC Lighting (Dongguan) Co, Ltd.
 390, Qingfeng Road, Qingxi Town, Dngguan, Guangdong. Postal code: 523653



Installation Instructions Model: EP2SI Flood light

Brightness adjustment:

- 1. Rotate the dimming knob until the arrow points to the corresponding scale or any position between the scales;
- 2. The higher the power, the brighter the lamp;

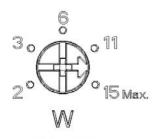


The values are for reference only


Light angle adjustment:


- 1. Remove the lampshade, grip the lamp body tightly, rotate the lamp cylinder cover until the arrow points to the corresponding scale, or any position between the scales;
- 2. Install the light mask (refer to the adjustment of the light mask for details);
- Note: There are 4 adjustable output angles.

Light hood adjustment:

 - 1. Loosen the hand tightened screws;
- 2. Rotate the light mask to the appropriate anti glare position;
- 3. Tighten the hand tightened screws.

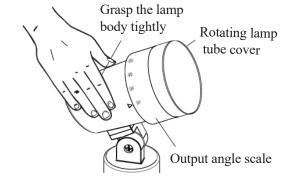

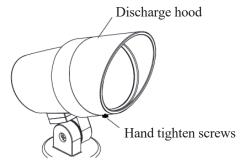



Product accessories:

• Ground plug - model: EP1SL-SPK-BK,

Provide optional installation methods.

Installation Precautions:

- 1. Please read the instruction manual completely before installation.
- 2. The lighting system must be installed by qualified professional electricians and comply with national and local laws and regulations. To reduce the risk of fire, electric shock, and personal injury, the main power switch must be turned off before installing or modifying the system.
- 4. Please keep this manual for future maintenance reference.
- 5. Failure to install lighting fixtures according to the instructions will result in no quality assurance.

Installation accessories (random delivery):



Discharge hood


Quantity: 1

Installation steps and wiring:

- 1. Install the lamp onto the working surface with screws;
- 2. The input wires of the lamp should be properly connected to the mains power line, and the wiring should be treated with waterproofing;
- 3. Lamp input: AC220V, 50/60Hz, the lamp input wire has a brown red core wire as the live wire "L", a blue core wire as the zero wire "N", and a yellow green core wire as the ground wire;
- 4. The power on light is on.


Lamp adjustment:

- 1. Tilt: Loosen the screw, adjust the lamp body to the appropriate position, and then tighten it;
- 2. Rotation: Loosen the nut, rotate the lamp body to the appropriate position, and then tighten it.

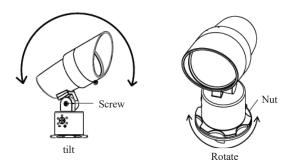

Licensed by "WAC" trademark holder - WAC LIGHTING, USA

Chinese Marketing Headquarters Address China factory Address : WAC Lighting (Shanghai) Co, Ltd. : 14,Lane 299, Bi Sheng Road, Shanghai 201204,China : Manufactured WAC Lighting (Dongguan) Co, Ltd. : 390, Qingfeng Road, Qingxi Town, Dngguan, Guangdong. Postal code: 523653

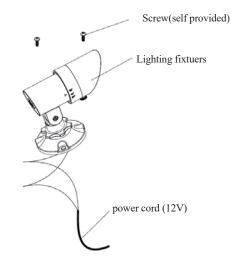




Installation Instructions Model: EP2MI Flood light

Brightness adjustment:

 - 1. Rotate the dimming knob until the arrow points to the corresponding scale or any position between the scales;
- 2. The higher the power, the brighter the lamp;




The values are for reference only


Light angle adjustment:


- 1. Remove the lampshade, grip the lamp body tightly, rotate the lamp cylinder cover until the arrow points to the corresponding scale, or any position between the scales;
- 2. Install the light mask (refer to the adjustment of the light mask for details);
- Note: There are 4 adjustable output angles.

Light hood adjustment:

 - 1. Loosen the hand tightened screws;
- 2. Rotate the light mask to the appropriate anti glare position;
- 3. Tighten the hand tightened screws.

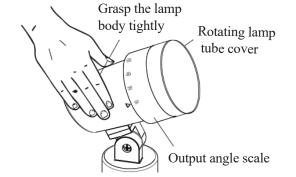

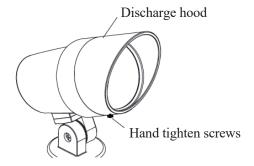



Product accessories:

• Ground plug - model: EP1SL-SPK-BK,

Provide optional installation methods.

 Licensed by "WAC" trademark holder - WAC LIGHTING, USA

 Chinese Marketing Headquarters
 : WAC Lighting (Shanghai) Co, Ltd.

 Address
 : 14,Lane 299, Bi Sheng Road, Shanghai 201204,China

 China factory
 : Manufactured WAC Lighting (Dongguan) Co, Ltd.

 Address
 : 390, Qingfeng Road, Qingxi Town, Dngguan, Guangdong. Postal code: 523653