
WAC

Installation Precautions:

- 1. Please read the instruction manual carefully before installation;
- 2. Installed by professional personnel;
- 3. To avoid the risk of electric shock, please confirm to turn off the power before installing, maintaining, or replacing the lighting fixtures;
- 4. This lamp is only suitable for indoor installation and use (cannot be used in humid environments);
- 5. Please keep this manual for reference and use.

- Installation method and steps: Cement Powder board Positioning and board Tighten two screws (2)(1)drilling two holes Φ6x28 installation 3 installation Ш I - 11 8 The mains power input line should be wired according to the following markings (pay (4)(5)Lock the screws on both sides and complete attention to distinguishing between non dimming lamps and dimming lamps) the installation Wiring of non Dimming lamp wiring dimming lamps Fireline L Ν Zero line L Fireline IV Ē Ground wire Ν Zero line Dimming Ground + positive electrode wire Dimming negative electrode

 \equiv . Accessories package parts:

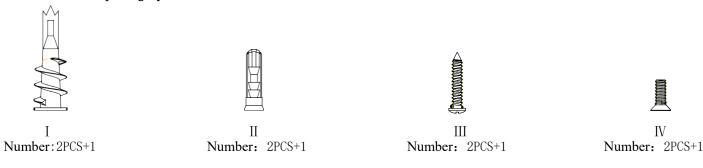

Licensed by "WAC" trademark holder - WAC LIGHTING, USA Chinese Marketing Headquarters : WAC I

: WAC Lighting (Shanghai) Co, Ltd.

: 14,Lane 299, Bi Sheng Road, Shanghai 201204,China

: Manufactured WAC Lighting (Dongguan) Co, Ltd.

: 390, Qingfeng Road, Qingxi Town, Dngguan, Guangdong. Postal code: 523653

Address China factory Address